
Headlining

To remove

1 Release the press studs and Velcro fasteners securing the headlining side flaps at the back.

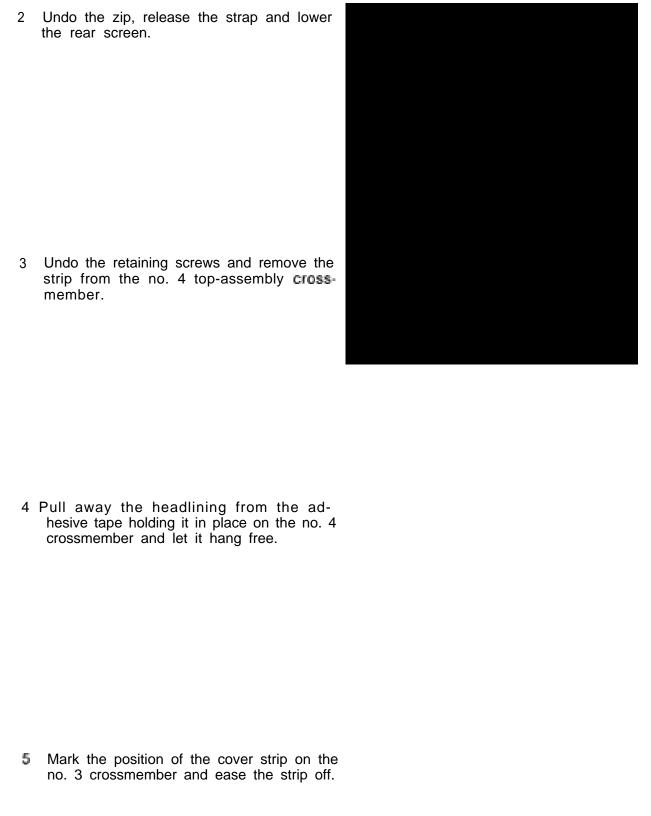

6	Mark the position of the strip on the no. 2 crossmember and ease the strip off.
7	Remove the screws from the finisher strip on the no. 1 top-assembly crossmember.
8	Release the latching handle and remove the finisher strip (secured by adhesive tape).
9	Pull the headlining away from the adhesive tape holding it in position on the no. 1 crossmember and lift it out of the car.

TO	fit
1	Lift the headlining into position and press the plastic retaining strip onto the no. 2 crossmember of the top assembly. En- sure the strip is positioned centrally by lining up the marks made before the strip was removed.
	If a new headlining is being installed, ensure that the retainer strip is equidistant

from either end of the no. 2 crossmember.

Using double-sided adhesive tape, press the headlining into position on the no. 1 crossmember and screw the finisher strip into place. Take care to align the finisher if it is bent.

tion on the no. 3 crossmember. Ensure the strip is positioned centrally by lining up the marks made before the strip was removed.

Press the plastic retainer strip into posi-

If a new headlining is being installed, ensure that the retainer strip is equidistant from either end of the no. 2 crossmember.

4 Press the headlining onto the sided adhesive tape on the no. 4 crossmember and screw the metal strip into position. Note that the strap for the rear screen is retained by means of the middle screw.

